

Start Here

Please refer to the Reference Manual on your CD for instructions on advanced configuration options.

Estimated Completion Time: 15 minutes.

Verify that System Requirements are Met

Before installing the GA511, please make sure that your computer meets the following minimum system requirements:


- A notebook PC with a Pentium® 300 MHz or higher compatible processor with an available CardBus slot
- A CD-ROM drive
- 64 MB of memory
- At least 5 MB of disk space
- Windows XP Home, Windows XP Professional, 2000, Me, 98SE (2nd edition), Windows 2000 Professional, Windows 2000 Server, or Windows 2000 Advanced Server. Some versions of Windows may ask for the Windows operating system installation files to complete the installation of the GA511 driver software.

Install the GA511 Gigabit CardBus Adapter

1. First, install the GA511 software.

- a. Power on your notebook, let the operating system boot up completely, and log in as needed.
- b. Insert the *NETGEAR Adapter Resource CD* into your CD-ROM drive. The Adapter Resource CD main page will load.

- c. From the Windows Start menu, select Run. The Run dialog box opens.

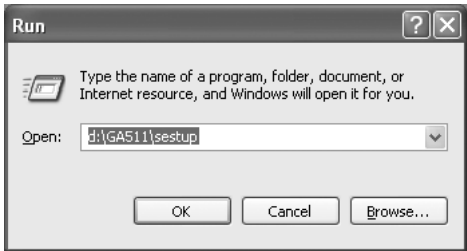

- d. Enter the path to the GA511 setup.exe file on the CD. For example, if your CD-ROM is drive D, enter **D:\GA511\setup** as the path. Then, click OK.
- e. Follow the InstallShield Wizard steps. Click Finish when done. Remove the *NETGEAR Adapter Resource CD*. If prompted, restart your computer.

Now, the GA511 driver and utility software are installed.

2. Next, install the GA511 Gigabit CardBus Adapter.

- a. Locate an available CardBus slot on the side of your notebook. Hold the PC Card with the NETGEAR logo facing up and insert it into the CardBus slot.
- Note:** Do not use excessive force, but make sure the card is fully inserted into the slot.
- b. Follow the Found New Hardware Wizard steps.



Accept the “Install the software automatically” setting, and click **Next** to proceed.


Note: If Windows XP or 2000 displays a Windows XP Logo Testing or a Digital Signature Not Found warning, click Continue Anyway or Yes to proceed.

- c. Click **Finish** to complete the installation. If prompted to restart your computer, power down and restart the notebook. You will see the GA511 Smart Wizard icon



in the system tray on the lower right side of the Windows task bar.

3. Now, configure the GA511.


- a. Double-click the connection icon  in the Windows system tray to open the Windows network connection page.

If the connection icon is not visible, you can change the connection properties by going to Start > Control Panel > Network Connections.

- b. Double-click on the NETGEAR GA511 Gigabit CardBus Adapter connection.
- c. Click Configure.
- d. Click Properties and configure the GA511 according to your network requirements.

For assistance with configuring the network settings, please see the networking tutorials on the *NETGEAR Adapter Resource CD*.

4. Finally, verify network connectivity.

- a. Click the GA511 Smart Wizard icon  on the lower right side of the Windows task bar.
- b. Verify that the GA511 status information matches your network.


Note: If you are unable to connect, see the the Troubleshooting section below or the troubleshooting tips in the Reference Manual on the *NETGEAR Adapter Resource CD*.

GA511 Smart Wizard Utility

The GA511 Smart Wizard utility provides a convenient way to check the status of the adapter without needing to view the LEDs on the top of the adapter itself. Click the

GA511 Smart Wizard utility icon  to view the current status.

If the utility is not displayed on the taskbar, you can start it by going to Start > Programs > NETGEAR GA511 Adapter > GA511 Smart Wizard Utility.

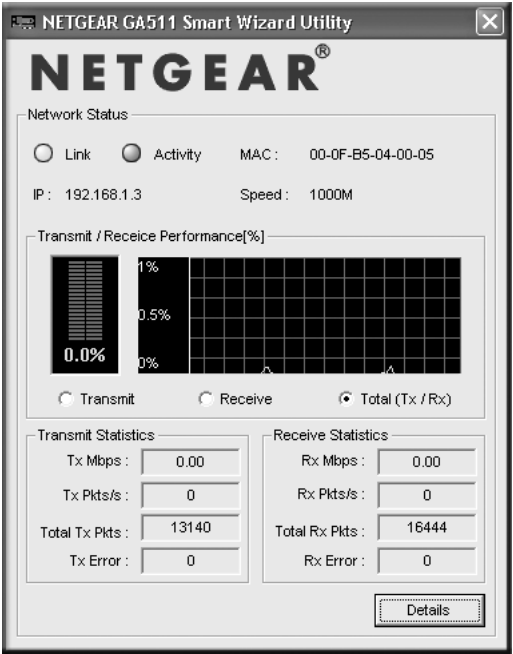

Click Details to view the settings of the adapter.

Troubleshooting

If you have trouble setting up your GA511, check the tips below. You can also consult more extensive troubleshooting procedures on the NETGEAR, Inc. support Web site at <http://kbserver.netgear.com/products/GA511.asp>.

Symptom	Cause	Solution
The Adapter LED lights are not lit.	The GA511 is not inserted into the slot properly or the GA511 software is not loaded.	Make sure the notebook is fully powered on. Remove and reinsert the GA511. Check the Windows device manager to see if the GA511 Gigabit CardBus Adapter is recognized and enabled. Reload the GA511 software, if necessary.
The Link/Act LED light is lit, but the 100/1000 LED is not lit.	The GA511 is operating at 10 Mbps.	The computer is connected to a router or other network device that is operating at 10 Mbps. If you connect to a 100 Mbps device, the 100/1000 LED will be amber. If you connect to a 1000 Mbps device, the 100/1000 LED will be green.
The 100/1000 LED is blinking intermittently.	There is a problem with the link such as a speed mismatch, possible bad cable, bad connector, or configuration mismatch.	Check the network cable and make sure it is functioning properly. Try plugging the network cable into a different port on the router attached to the gigabit Ethernet adapter.

Technical Support

PLEASE REFER TO THE SUPPORT INFORMATION CARD THAT SHIPPED WITH YOUR PRODUCT.

By registering your product at www.NETGEAR.com/register, we can provide you with timely expert technical support.

NETGEAR, INC. Support Information

Phone: 1-888-NETGEAR (For US & Canada only) — 24x7 phone support. See the Support Information card for other countries.

E-mail: support@NETGEAR.com - 24 x 7 online support

©2004 NETGEAR, Inc. NETGEAR, the Netgear logo, The Gear Guy, Auto Uplink and Everybody's Connecting are trademarks or registered trademarks of Netgear, Inc. in the United States and/or other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice. All rights reserved.



201-10177-01

July 28, 2004